



ILLUSTRATION NO. 1

MEASURING HEIGHT AND SETBACK OF ANTENNAS


EARTH STATION DISH ANTENNA

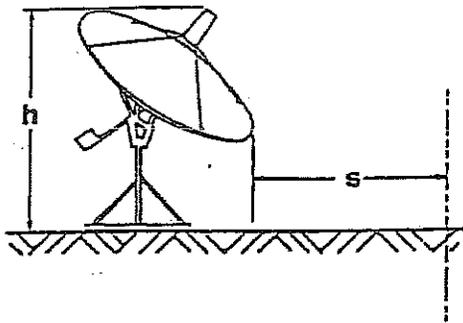

TOWER MOUNTED ANTENNA

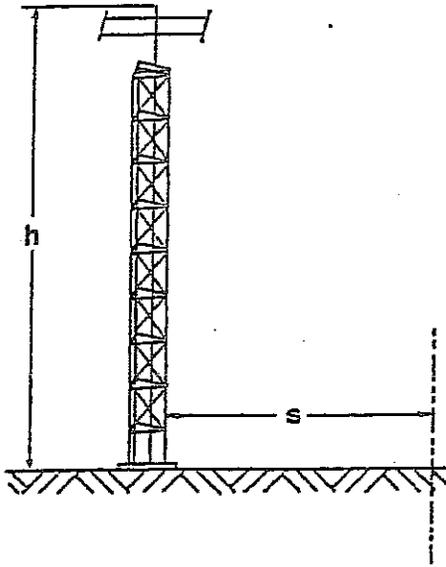

ROOF MOUNTED ANTENNA

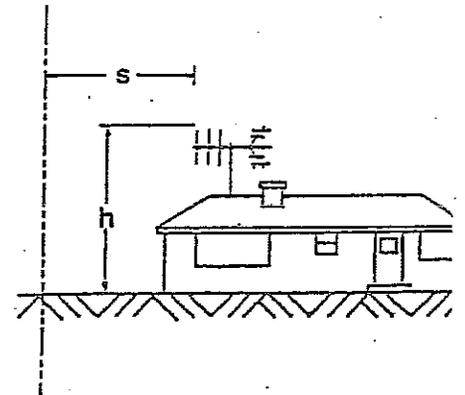

s = setback
h = height

ILLUSTRATION NO. 2

EXAMPLE OF ZERO LOT LINE DEVELOPMENT

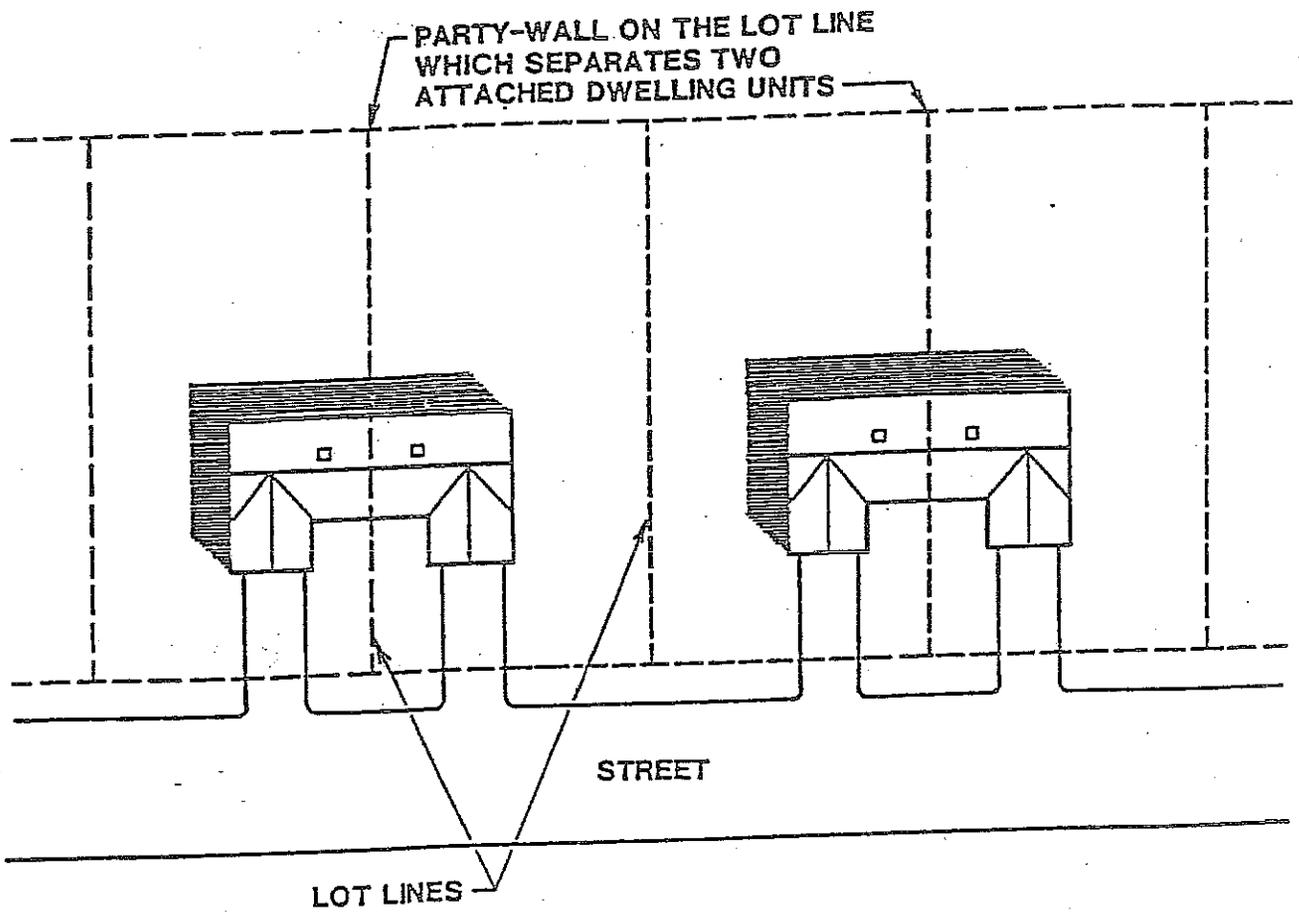


ILLUSTRATION NO. 3

VISION CLEARANCE TRIANGLE
(CROSS-SECTIONAL VIEW)


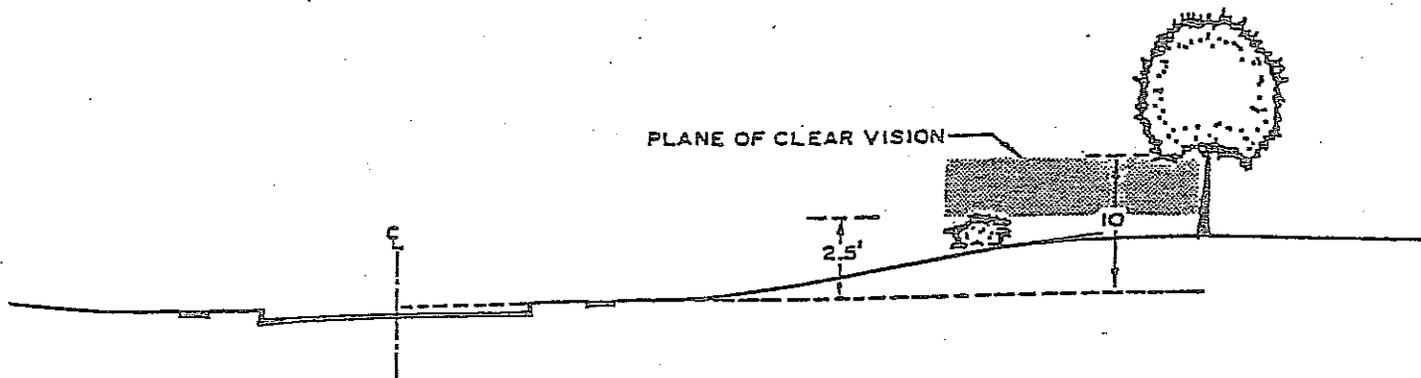


ILLUSTRATION NO. 4

VISION CLEARANCE TRIANGLE
(PLAN VIEW)

TWO LOCAL STREETS INTERSECTING

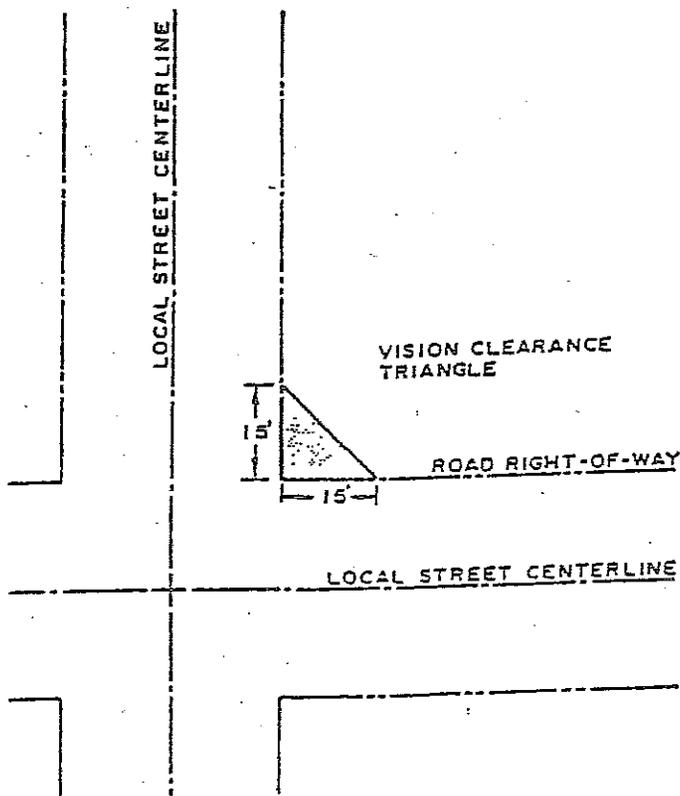

TWO ARTERIAL STREETS INTERSECTING

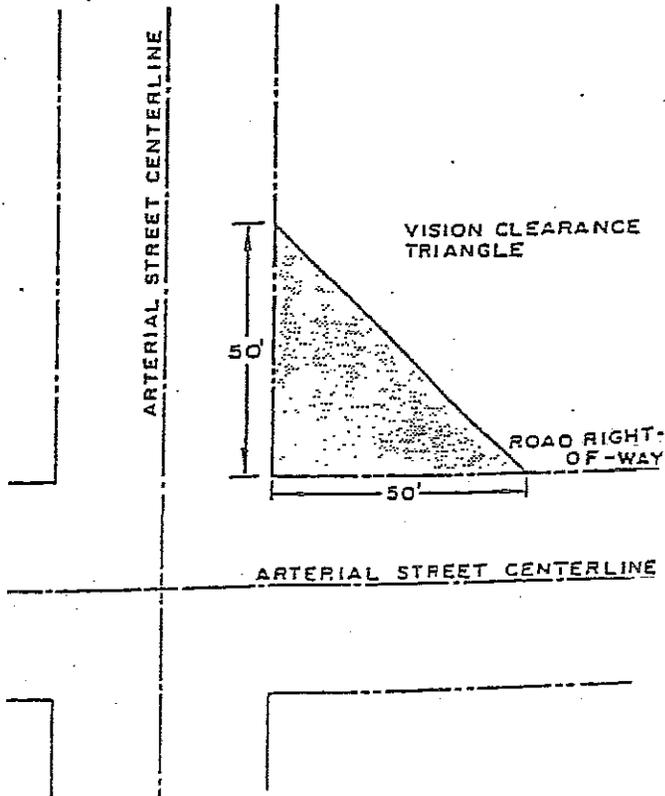


ILLUSTRATION NO. 5
ADDITIONS AND AVERAGE STREET YARDS



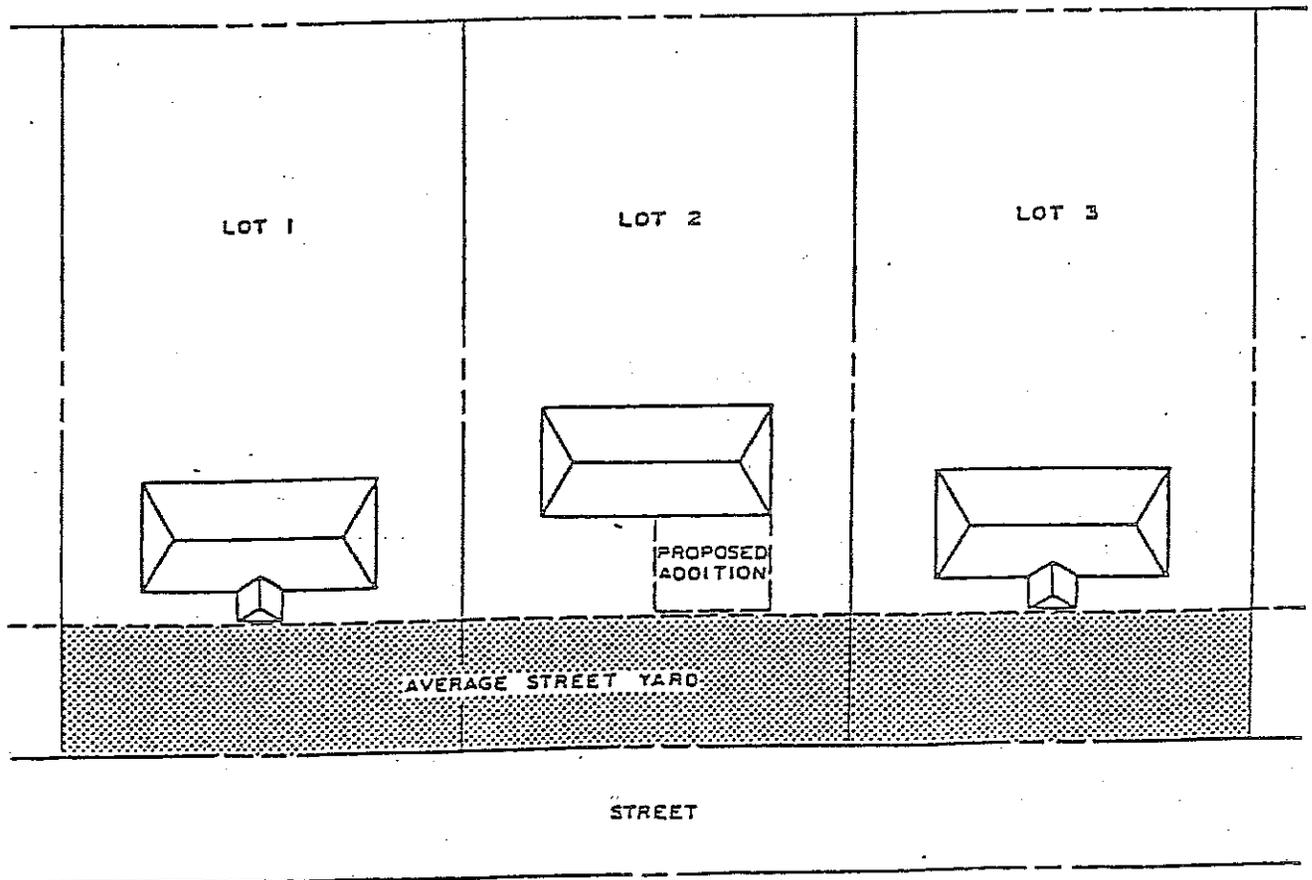


ILLUSTRATION NO.6


LOCATION OF YARDS ON A TYPICAL INTERIOR LOT,
CORNER LOT, AND DOUBLE FRONTAGE LOT

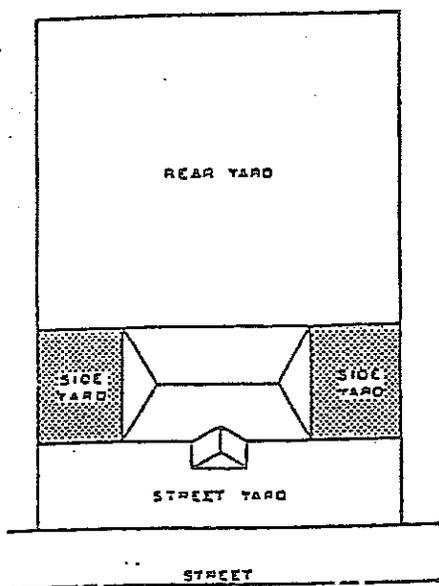

INTERIOR LOT

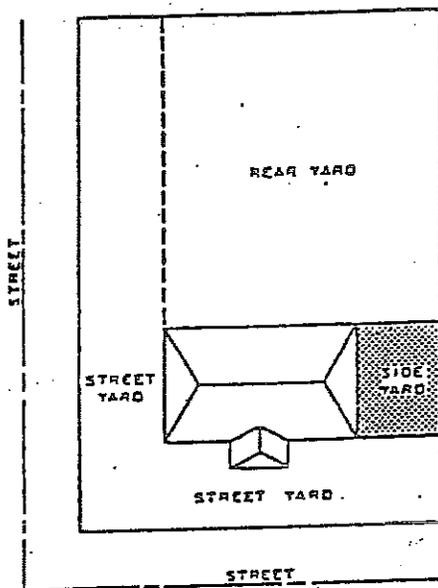

CORNER LOT

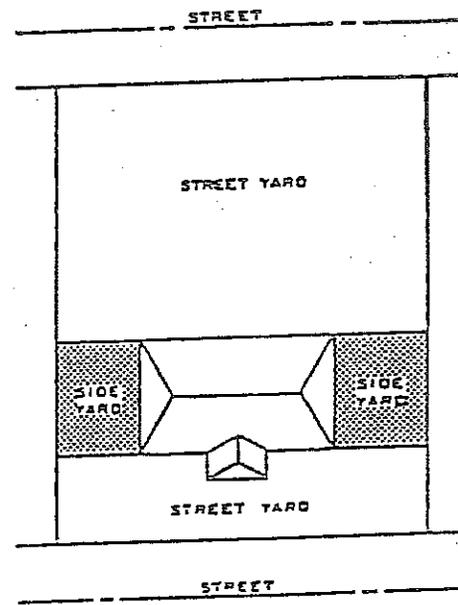

DOUBLE FRONTAGE LOT..